


# TATTLETALE<sup>®</sup> Annunciators and Magnetic Switches

M-6797B  
Revised 07-04  
Catalog Section 25  
(00-02-0078)

MURPHY

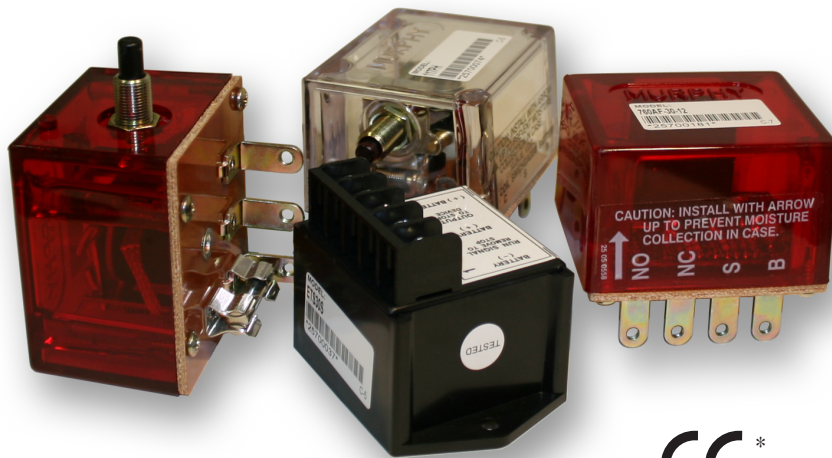

## ■ Nerve Centers for Murphy SWICHGAGE<sup>®</sup> Instruments and Automation Systems

### Description

TATTLETALE<sup>®</sup> annunciators and Magnetic Switches are the nerve centers that translate SWICHGAGE<sup>®</sup> contact operations into decisions and operate the alarm or shutdown device. They are the electrical load carrying devices for the alarm or shutdown device. TATTLETALE<sup>®</sup> annunciators indicate which monitored function failed leading to the alarm or shutdown whereas magnetic switches do not. Magnetic switches operate basically as a latching relay.

### Application

Magnetic Switches and TATTLETALE<sup>®</sup> annunciators are available for use with engines or electric motors. Various circuits, time delays, and contact configurations are available to match the power source and mode of operation required for alarm only, alarm before shutdown or shutdown only.

For distributor ignition engines, the magnetic switch opens the distributor coil circuit to cause shutdown. For magneto or CD ignitions the magnetic switch grounds the ignition output. Some models can also trip fuel valves instead of or in addition to grounding the ignition. Diesel engines are shut down by either closing off the fuel or air supply. Magnetic switches and TATTLETALE<sup>®</sup> annunciators can make or break circuits for these engines.

For electric motor applications, various magnetic switches are available to operate the motor starter, holding coil directly or in conjunction with appropriate Murphy Transformer-Relay assembly.

### Features

Magnetic switches and TATTLETALE<sup>®</sup> annunciators described in this bulletin are electrically tripped relay type devices. Models are available to operate from battery power, 120 VAC, conventional magnetos and capacitor discharge type ignitions. Energized to run models allow CLOSED LOOP circuitry. Others draw momentary power to trip. Configurations are available for contact make or contact break to cause shutdown. Some models have both make and break contacts.

All models have a weather resistant case with screw terminals for ease of customer hookup. Manually reset models have a face mounted reset push button which also serves as a fault indicator in the TATTLETALE<sup>®</sup> version. In this application, one or more TATTLETALE<sup>®</sup>/magnetic switches are used to advise operating personnel which monitored function caused shutdown. Only the TATTLETALE<sup>®</sup> connected to that function sensor trips causing the reset push button to pop out.

Electrically reset models perform the same functions as the manually reset models and are reset by cycling the power supply off and then on.

Time delay models use reliable solid state timing circuits to lockout operated switch contacts for start-up and/or to allow operation of alarms before shutdown occurs. Specific models allow application of power to a shutdown circuit and automatic disconnect of power after a given time delay.

See the chart on page 2 for features by part number.

\* Applies to selected models.

CALL MURCAL TO PLACE YOUR ORDER

MURPHY

Specifications	117	117PH	MS2100	MS2110	MS2111	MS2120	518PH	518APH	520APH	521PH	700A ‡	761APH	822PH	M426A-1	F129A	ETS30S
Coil Voltage																
12 volt						•	•	•	•	•	•				•	
24 volt						•	•	•	•	•	•				•	
12/24 volt *	•	•		•	•							•				•
120 VAC			•													
Magneto ignition					•									•		
CD ignition		•												•		
Contacts (see Note 2 below)																
NCH	•	•	A	A	A		•	•	•	•	•	•				
NOH			A	A	A		•	•		•	•	•				•
NCG						B								B	B	
NOG						B			•					B	B	
Latch Type																
Energize to trip	•	•	•	•	•	•					•	•	•	•	•	•
Energize to latch							•	•	•							
Reset Type																
Manual indicating		•	•	•	•	•	•	•	•		•	•	•			
Manual non-indicating	•															
Electric non-indicating										•					•	•
Time Delay																
Before shutdown								•		•	•					
Start only										•	•					
After shutdown																•

\* Multi-voltage AC or DC systems. See circuit descriptions below and on next page.

**A:** Dry contacts normally wired in hot circuit.  
**B:** Dry contacts normally wired in ground circuit.





‡ Does not latch after shutdown signal clears, automatically resets.

### NOTES


The chart above indicates features/configurations available for each model.

1. Coil Voltage- Coils are specific voltage rated or multiple voltage rated.
2. Contacts- This is the control circuit output. In the latched position the NCH contact has a "hot" output; in the tripped position the NOH contact has a "hot" output. In the latched position, the NCG has a "grounded" output; in the tripped position, the NOG has a "grounded" output.


3. Latch Type- Refers to whether the magnetic coil is momentarily energized to trip or requires continuous power in the operating mode and de-energizes to trip.
4. Reset Type- Refers to manual or electric reset; manual indicating type is a TATTLETALE.
5. Time Delay- Indicates operation of the time delay.

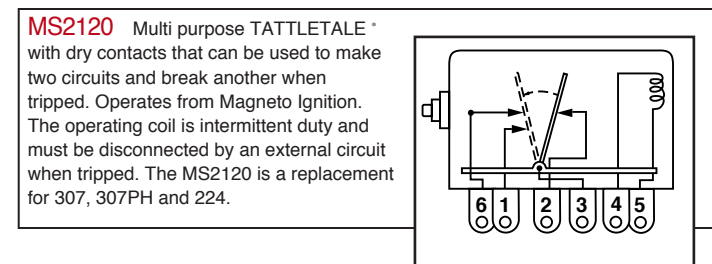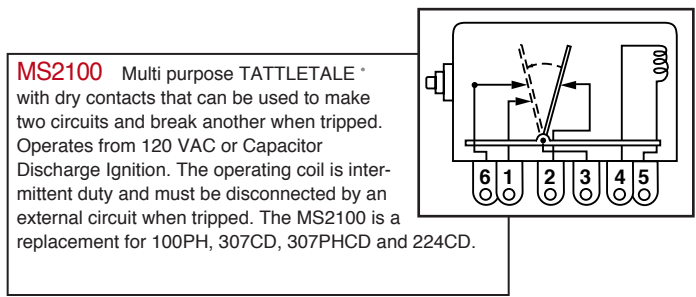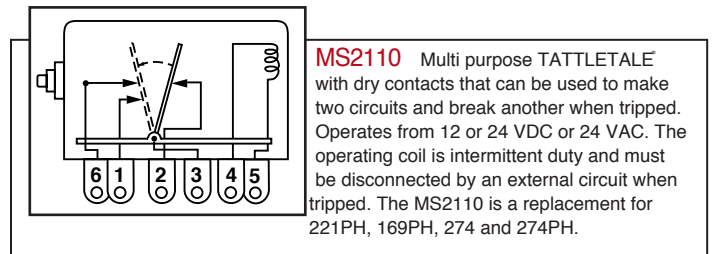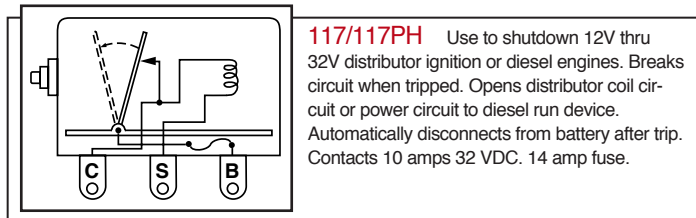


CALL MURCAL TO PLACE YOUR ORDER

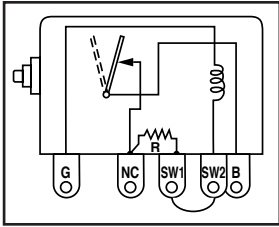


**518PH** Same as 517PH except allows for SWICHGAGE<sup>+</sup> and/or N.C. contacts to be wired "Closed Loop" (in series). Any contact open or SWICHGAGE<sup>+</sup> contact close in the circuit shunt trips the 518PH. Specify 12 or 24 VDC. Contacts 10 amps 24V. 14 amp fuse.

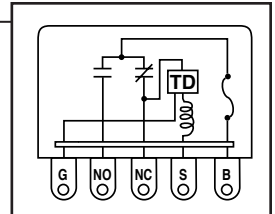

**760A/ 760AF/761APH** Use for distributor ignition or diesel. Time delay lockout of SWICHGAGE<sup>+</sup> contacts on start-up only; customer wired for delayed or immediate trip on shutdown. Breaks and makes circuits when tripped. 760A resets automatically when the shutdown signal is removed or power is removed. 761APH has manual reset. 760AF is 760A with inline fuse. Must specify 12 or 24 VDC, and length of time delay. Optional time delays: 15, 30 (standard) or 60 seconds. Contacts 10 amps 24 V. 14 amp fuse. Models 760A and 761APH carry the CE mark.

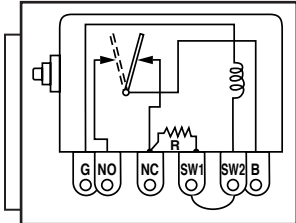


**518APH** Same as 517APH except allows for SWICHGAGE<sup>+</sup> and/or N.C. contacts to be wired "Closed Loop" (in series). Any contact open or SWICHGAGE<sup>+</sup> contact close in the circuit shunt trips the 518APH. Specify 12 or 24 VDC. Contacts 10 amps 24V. 14 amp fuse.


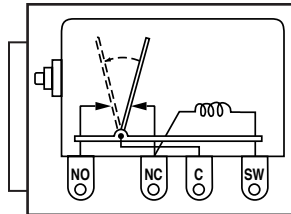


**822PH** Used in Murphy TR-assemblies as master disconnect. 24 VAC coil energizes when SWICHGAGE<sup>+</sup> contact closes to ground; breaks and makes circuit when tripped. Manual reset.


**520APH** Same as 518APH except with 30 second time delay before trip on one SWICHGAGE<sup>+</sup> contact input but immediate trip on the second SWICHGAGE<sup>+</sup> contact input. Typical use is for immediate stop of engine from oil pressure or coolant temperature, but delayed shutdown from alignment switches on center pivot irrigation system. Specify 12 or 24 VDC and length of time delay. Time delays are available from 5 to 120 seconds. Contacts 10 amps 24 V. 14 amp fuse.

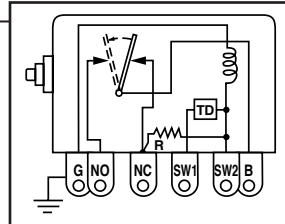


**M4264 Series** Detects loss of magneto/CD ignition output and transfers contacts for customer use. Contacts 10 amps; 48 VAC/VDC. M42641CD transfers SPDT dry contacts when tripped.

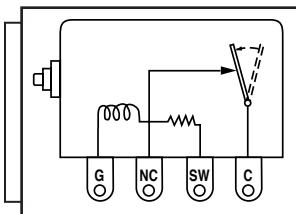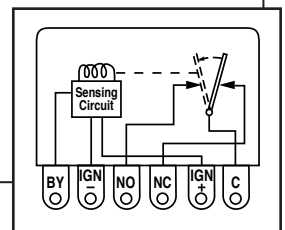

**521PH** Use with N.C. SWICHGAGE<sup>+</sup> or switches to ground magneto or CD ignition when tripped. Trip coil energized to run, de-energized to shutdown when N.C. contacts open. Specify 12 or 24 VDC. Contacts 10 amps 24 V.

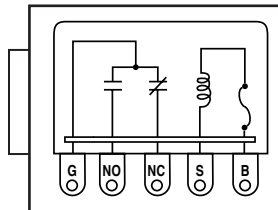

**R129A** A SPDT relay with 10 amp dry contacts. Specify 12 or 24 VDC. Contacts 10 amps 24 VDC. 14 amp fuse.

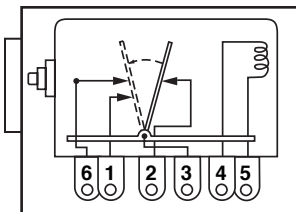

**MS2111** Replaces 221PH w/72 ohm coil. Used with NICS-78 non-incendive control system. Service part only.

**ETS30S** All solid-state time delay for energized to stop circuits such as solenoids. When a shutdown signal is received, the ETS30S applies power to the shutdown device for 30 seconds and then disconnects the power. Input power 12 or 24 VDC.

\* Complies with EMC Council directive 89/336/EEC regarding electromagnetic compatibility.

CALL MURCAL TO PLACE YOUR ORDER



P:(661)272-4700 F:(661)947-7570  
www.murcal.com e-mail:sales@murcal.com

# How to Order

Specify model number and options using the diagram below. List options in alphabetical order (A to Z) followed by numeric in ascending order. Place a dash (-) between each option.

760AF - 15 - 12 -

**Base Models**

117 *	R129A
117PH *	ETS30S
518PH	MS2100
518APH	MS2111
520APH	MS2110
521PH	MS2120
760A *	
761APH *	
822PH	
M42641M	
M42641CD	

**Options**

Not all options may not be available on all models in combination with other options. See "Configurations Available" chart below.

AS = Auxiliary SPDT switch  
 ES = Environmentally sealed  
 EL = Explosion-proof less case

**Time Delay (where applicable)**

15 = 15 seconds  
 30 = 30 seconds  
 60 = 60 seconds  
 Specify other.

**Voltage Ground (where applicable)**

12 = 12 VDC  
 24 = 24 VDC

\* Add the letter "F" to the base model to indicate an inline fuse instead of a base mounted fuse. Example: 760AF, 761APHF, 117F.

## Configurations Available

	117	MS2110	MS2110	MS2120	MS2111	517/517A	518/518A	520A	521	760A	760AF	761A	822	M4264-1
Non-PH	1,2								1	1				1
PH	1,2	1,2	1,2	1,2	1	1	1	1			1	1		
PH-ES	1	1	1	1	1									

1 = Offered  
 2 = Auxiliary snap-switch

## Accessories

Order accessories as a separate item. Specify part number when ordering.

- 25050016 Weathercap.
- 25050547 Clear flexible dust boot for push button.
- 30050323 Single unit mounting panel.
- 65010026 In-line fuse holder with 14 amp fuse.

## Warranty

A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to [www.fwmurphy.com/support/warranty.htm](http://www.fwmurphy.com/support/warranty.htm)

CALL MURCAL TO PLACE YOUR ORDER



P:(661)272-4700 F:(661)947-7570  
[www.murcal.com](http://www.murcal.com) e-mail: [sales@murcal.com](mailto:sales@murcal.com)



USA-ISO 9001:2000 FW 26221  
 UK-ISO 9001:2000 FW 29422