

PKP-1500-LI
J1939 USER MANUAL




THE PRESENT MANUAL IS FOR REFERENCE ONLY AND MIGHT BE NOT UP TO DATE TO THE LATEST
VERSION. PLEASE CONTACT US FOR GETTING THE MOST UPDATED FILE


Table of contents

1. How to connect the wires:	3
2. Reference.....	3
3. Message header description.....	4
4. General Data Format.....	4
5. Default Settings.....	5
6. Key Contact state (01h).....	5
7. LED command (01h)	6
8. Set LED indicators brightness level (02h)	7
9. Set backlight level (03h).....	7
10. Set startup keys message(28h).....	7
11. Get software revision (2Ah).....	8
12. Set startup LED show (34h)	8
13. Baud rate setting (6Fh)	8
14. Set Source Address (70h).....	9
15. Periodic key-state transmission (71h)	9
16. Event state transmission (72h).....	10
17. LED Acknowledgment (73h).....	10
18. Address Claim at boot (74h)	11
19. Heartbeat message (75h).....	12
20. Key-state message period (77h)	13
21. Start Demo mode(7Ah).....	13
22. Default backlight brightness level (7Bh).....	14
23. Default LED indicators brightness level (7Ch)	14
24. Default backlight color (7Dh)	15
25. Set CAN protocol.....	15
APPENDIX: DEMO Mode instructions	16
26. Revision history	16

1. How to connect Deutsch 4 pin:

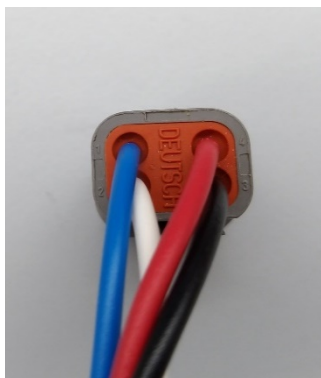

PIN	COLOUR	FUNCTION
1	Blue	CAN L
2	White	CAN H
3	Black	Negative battery
4	Red	Vbatt. (12-24V)

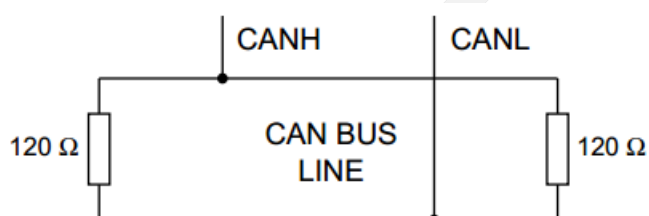


Each end of the CAN bus is terminated with 120Ω resistors in compliance with the standard to minimize signal reflections on the bus. You may need to place a 120Ω resistor between CAN-L and CAN-H.



Warning: to avoid breakage do not tighten the backshell nuts with a torque exceeding 0.8 Nm!

2. Reference

PKP1500LI

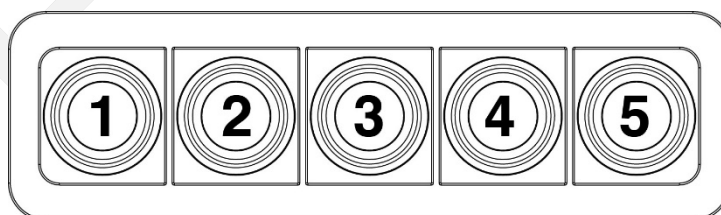

3. Message header description

The 29-bit CAN identifier used in J1939 is structured in the following way.

Priority	Reserved	Data Page	PDU Format	PDU Specific	Source Address
3 bits	1 bit	1 bit	8 bits	8 bits	8 bits

The proprietary format used by PKP keypads is defined as follows:

Priority = 6.

Reserved = 0.

Data page = 0.

PDU Format = EFh [the message is addressable].

PDU Specific = Destination Address.

Parameter Group Number (PGN) = 61184 (EFO0h).

An example of CAN identifier of messages sent to the keypad is 18EF2100h where:
21h is the destination address [keypad]
00h is the source address.

An example of CAN identifier of messages sent by the keypad is 18EFFF21h where:
FFh refers to broadcast messages [no specific destination address]
21h is the source address [keypad].

4. General Data Format

The proprietary protocol has defined a general format for the data fields in the PGN 61184.

The format consists of:

1 header field (2 bytes)

1 command byte

5 bytes [the remaining field] are defined specifically for each command.

The data length is 8 bytes, unused bits and bytes are set to all 1's (0xFF).

Byte 0	04h
Byte 1	1Bh
Byte 2	Command
Byte 3-7	Data required for each specific command

5. Default Settings

Setting	Default state or level	How to change
CAN bus baud rate	250 kbit/s	Command 6Fh
Source address	21h	Command 70h
Keypad identifier	21h	Command 70h
Heartbeat message	Disabled	Command 75h
Periodic key-state message transmission	Disabled	Command 71h
Key-state message period	100ms	Command 77h
Event state transmission	Enabled	Command 72h
Address claim at boot	Disabled	Command 74h
Default LED indicators brightness level	3Fh	Command 7Ch
Default backlight brightness level	OFF	Command 7Bh
Startup LED show	Complete LED Sequence	Command 34h
Default backlight color	Amber	Command 7Dh
LED acknowledgment	Disabled	Command 73h

6. Key Contact state (01h)

This message is sent by the keypad to indicate the state of the contacts. The destination address is set to FFh: broadcast message. See chapter 2 for Key number reference.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	01h	Key Contact state
Byte 3	XXh	XX: Key number
Byte 4	YYh	Contact State 00: Switch OFF (Key released) 01: Switch ON (Key pressed)
Byte 5	ZZh	Keypad Identifier (default 21h)
Byte 6,7	FFh	Not used

Examples:

Direction	Identifier	Format	Message	Data
From Keypad	18EFFF21h	Ext	04 1B 01 01 01 21 FF FF	Key 1 ON
From Keypad	18EFFF21h	Ext	04 1B 01 01 00 21 FF FF	Key 1 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 02 01 21 FF FF	Key 2 ON
From Keypad	18EFFF21h	Ext	04 1B 01 02 00 21 FF FF	Key 2 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 03 01 21 FF FF	Key 3 ON
From Keypad	18EFFF21h	Ext	04 1B 01 03 00 21 FF FF	Key 3 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 04 01 21 FF FF	Key 4 ON
From Keypad	18EFFF21h	Ext	04 1B 01 04 00 21 FF FF	Key 4 OFF
From Keypad	18EFFF21h	Ext	04 1B 01 05 01 21 FF FF	Key 5 ON
From Keypad	18EFFF21h	Ext	04 1B 01 05 00 21 FF FF	Key 5 OFF

If the Event state transmission is enabled, the Key Contact state message is sent when a key is switched. If the periodic key-state transmission is enabled (see [Command 71h](#) for further details), at each given time interval a Key Contact state message is transmitted for each button of the keypad.

7. LED command (01h)

This message is sent to the keypad to set the state of the LED indicators. See chapter 2 for Key and LED number reference.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	01h	LED command
Byte 3	XXh	XX: PKP Key number
Byte 4	YYh	LED Color 00h: off 01h: red 02h: green 03h: blue 04h: yellow 05h: cyan 06h: magenta 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 5	ZZh	LED State 00h: off 01h: on 02h: blink 03h: alternate blink
Byte 6	WWh	LED Secondary Color (only for alt blink) 00h: off 01h: red 02h: green 03h: blue 04h: yellow 05h: cyan 06h: magenta 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 7	FFh	Not used

Examples:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 01 01 01 01 00 FF	LED key1 red on
To Keypad	18EF2100h	Ext	04 1B 01 01 00 00 00 FF	LED key1 off
To Keypad	18EF2100h	Ext	04 1B 01 02 03 02 00 FF	LED key2 blinks blue
To Keypad	18EF2100h	Ext	04 1B 01 05 06 01 00 FF	LED key5 magenta
To Keypad	18EF2100h	Ext	04 1B 01 04 02 01 00 FF	LED key4 green
To Keypad	18EF2100h	Ext	04 1B 01 03 05 03 09 FF	LED key3 blinks cyan and yellow/green in alternate mode

To Keypad	18EF2100h	Ext	04 1B 01 02 07 03 03 FF	LED key2 blinks white and blue in alternate mode
------------------	-----------	-----	-------------------------	--------------------------------------------------

Set LED indicators brightness level (02h)

This message sets the value of the LED indicators brightness level. The value can be set from 0 to 3Fh (min-100%) of the LED dimming range.

NOTE: this setting has temporary effect and at the startup comes back to the default value. If the default value is desired to change, please refer to the [Command 7Ch](#).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	02h	Set LED indicators brightness level
Byte 3	XXh	XX: Dim Value (default 3Fh) From 00h (min) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 02 2F FF FF FF FF	Brightness level set to 75%

8. Set backlight level (03h)

This message sets the value of the backlight brightness. The value can be set from 0 to 3Fh (0-100%) of the brightness range.

NOTE: this setting has temporary effect and at the startup comes back to the default value. If the default value is desired to change, please refer to the [Command 7Bh](#).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	03h	Set backlight level
Byte 3	XXh	XX: Value (default 00h) From 00h (0%) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 03 20 FF FF FF FF	Backlight level set to 50%

9. Set startup keys message(28h)

This command enables the transmission of the state of the keys during power up.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	28h	Set startup keys message
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 28 01 FF FF FF FF	Startup keys message enabled

10. Get software revision (2Ah)

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	2Ah	Get software revision
Byte 3,7	FFh	Not used

Answer:

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	2Ah	Get software revision
Byte 3,6	XXh XXh XXh XXh	SW revision ASCII
Byte 7	00h	Not used

Example

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 2A FF FF FF FF FF	Get software revision
From Keypad	18EFFF21h	Ext	04 1B 2A 56 32 2E 31 30	V2.10

11. Set startup LED show (34h)

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	34h	Set startup LED show
Byte 3	XXh	XX: 00h OFF 01h Complete LED show (default) 02h Fast flash
Byte 4,7	FFh	Not used

Example

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 34 00 FF FF FF FF	Set Startup LED show OFF

12. Baud rate setting (6Fh)

This message is used to change the baud rate of the CAN bus. Connecting only one keypad to the bus when changing the baud rate is recommended. If an invalid value is chosen, then no change is done to the stored value.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	6Fh	Baud rate setting
Byte 3	02h	500kbit/s
	03h	250kbit/s

Byte 4,7	FFh	Not used
-----------------	-----	----------

Example

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 6F 02 FF FF FF FF	Baud rate set to 500kbit/s

13. Set Source Address (70h)

This message is used to change the keypad CAN Source Address and/or the Keypad Identifier. Either or both the Source Address or Keypad Identifier may be changed independently. Connecting only one keypad to the bus when changing the keypad address is recommended. If an invalid value is chosen, then no change is done to the stored value.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	70h	Set Source Address
Byte 3	XXh	XX: CAN Source Address From 01h to FDh FEh: reserved FFh: no change
Byte 4	YYh	YY: Keypad Identifier From 00h to FDh FEh: reserved FFh: no change
Byte 5,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 70 18 22 FF FF FF	Source address set to 18h; keypad identifier set to 22h.

14. Periodic key-state transmission (71h)

This message enables or disables the periodic transmission of the Key state. When enabled, one contact state message is periodically sent for each button of the keypad.

The period is set to 100ms as default value but can be changed through command 77h.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	71h	Periodic state transmission message
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 71 01 FF FF FF FF	Periodic key-state transmission enabled

15. Event state transmission (72h)

This message enables or disables event-driven key state transmissions. When this feature is enabled, the keypad transmits the state of a contact at the time that the contact changes state (pressed or released).

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	72h	Event state transmission
Byte 3	XXh	XX: 00h Disabled 01h Enabled (default)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 72 00 FF FF FF FF	Event state transmission disabled

16. LED Acknowledgment (73h)

This command enables or disables the transmission of the LED Acknowledgement message. When this feature is enabled the keypad transmits an acknowledgement message each time a LED Command is received.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	73h	LED Acknowledgement
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 73 01 FF FF FF FF	LED acknowledgment enabled
To Keypad	18EF2100h	Ext	04 1B 01 01 04 03 05 FF	LED Command
From Keypad	18EFFF21h	Ext	00 03 01 04 05 FF FF FF	LED Ack message

LED Acknowledgment message:

Byte 0	00h	
Byte 1	XXh	XX: LED state
Byte 2	YYh	YY: Key number
Byte 3	PPh	PP: Primary color
Byte 4	ZZh	ZZ: Secondary color
Byte 5,7	FFh	Not used

17. Address Claim at boot (74h)

This message enables or disables the address claim procedure.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	74h	Address claim at boot
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 74 01 FF FF FF FF	Address claim enabled

Address claiming procedure:

Under normal operation, the keypad application sends an Address Claim parameter group at start up and waits up to 250ms for the other devices connected to the same network to send a message containing the device's address and name. The keypad checks every response and compares the names to see who has the highest priority. If a device is already using the address and has a higher priority, then a new address is selected, and the process starts over. If the keypad has a higher priority than the device in use then it waits for other systems to reply, while the responding device will have to change its address and send an address claim itself. If no message is received after the time [250ms] is up, then the device has claimed the address.

Address claim parameter group:

Priority = 6.

Destination Address should always be the Global Address FFh

Parameter Group Number (PGN) = 60928(E00h).

Data Length = 8

Data = NAME field

Example:

Direction	Identifier	Format	Message	Data
From Keypad	18EEFF21h	Ext	3F 42 6F 1A 00 82 3C C0	

18. Heartbeat message (75h)

This command enables or disables the transmission of Heartbeat message. This message is designed to indicate to other devices on the bus that this unit continues to function.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	75h	Heartbeat message
Byte 3	XXh	XX: 00h Disabled (default) 01h Enabled
Byte 4	YYh	YY: Period in milliseconds ÷ 10 From 05h (50ms) to FEh (2.54 sec)
Byte 5,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 75 01 32 FF FF FF	Heartbeat enabled with 500ms period.

Heartbeat generated message:

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	F9h	Heartbeat message
Byte 3	XXh	XX: Message counter, incremented each message sent
Byte 4	00 00 00 K5 K4 K3 K2 K1	Button state indicators Each bit represents a button state 0: OFF 1: ON
Byte 5	00h	
Byte 6	FFh	Not used
Byte 7	21h	Keypad identifier

Example:

Direction	Identifier	Format	Message	Data
From Keypad	18EFFF21h	Ext	04 1B F9 03 04 00 FF 21	Heartbeat message with button 3 pressed.
From Keypad	18EFFF21h	Ext	04 1B F9 03 10 00 FF 21	Heartbeat message with button 5 pressed

19. Key-state message period (77h)

This message sets the period time for the PERIODIC KEY-STATE TRANSMISSION [71h].

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	77h	Key-state message period
Byte 3	XXh	
		XX: Period in milliseconds ÷ 10 From 05h (50ms) to FEh (2.54 sec)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 77 3C FF FF FF FF FF	Period set to 600ms

20. Start Demo mode(7Ah)

This message enables the Demo mode function. Demo mode is a special feature that consists in different LED states for each button pressing. Refer to the appendix “Demo mode instructions” to try these special features. Disconnect and reconnect the keypad after sending the message to enter this mode. To exit the Demo mode, send the Disable Demo mode command or another command message.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Ah	Start Demo mode
Byte 3	XXh	
		XX: 00h Disabled (Default) 01h Enabled
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7A 01 FF FF FF FF	Demo mode enabled

21. Default backlight brightness level (7Bh)

This message sets the default value of the backlight brightness level. The value can be set from 0 to 3Fh (0-100%) of the brightness range.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Bh	Default backlight brightness level
Byte 3	XXh	XX: Value From 00h (0%) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7B 10 FF FF FF FF	Default backlight level set to 25%

22. Default LED indicators brightness level (7Ch)

This message sets the default value of the LED indicator brightness level. The value can be set from 0 to 3Fh (min-100%) of the LED dimming range.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Ch	Default LED indicators brightness level
Byte 3	XXh	XX: Value From 00h (min) to 3Fh (100%)
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7C 2F FF FF FF FF	Default LED indicators brightness level set to 75%

23. Default backlight color (7Dh)

This message sets the default color of the backlight.

Byte 0	04h	Header bytes
Byte 1	1Bh	
Byte 2	7Dh	Default backlight color
Byte 3	XXh	XX: color 01: red 02: green 03: blue 04: yellow 05: cyan 06: magenta 07h: white/light blue 08h: amber/orange 09h: yellow/green
Byte 4,7	FFh	Not used

Example:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 7D 07 FF FF FF FF	Default backlight color set to blue

24. Set CAN protocol

This set of messages are used to change to the desired CANbus protocol.

- Change from J1939 to CANopen:

Direction	Identifier	Format	Message	Data
To Keypad	18EF2100h	Ext	04 1B 80 00 FF FF FF FF	Change to CANopen

- Change from CANopen to J1939:

Direction	Identifier	Format	Message	Data
To Keypad	615h	Std	2B FF 20 01 01	Change to J1939

APPENDIX: DEMO Mode instructions

In DEMO Mode you can try the following functions by pressing keys on the PKP1500LI.

Entering this mode, you turn the LED indicators on with red color (opening feature); each time you press the key 1 you can change the color of the LED indicators with the following sequence:

1. Red;
2. Green;
3. Blue;
4. Yellow;
5. Cyan;
6. Magenta;
7. White/light blue;
8. Amber;
9. Yellow/green;
10. OFF.

Holding down the key 2, you can increase LED brightness level.

Holding down the key 3, you can decrease LED brightness level.

If you press the key 4, there are different steps in this sequence:

1. Complete LED show of all colors;
2. Backlight active with keys on in sequence (it is possible to change the color of LED indicators by pressing button 1 and the color of the backlight by pressing button 5);
3. Alternate blinking of LED keys number 1 with red color; 2 with amber color; 3 with yellow; 4 with green color; 5 with cyan color.
4. Return to the opening feature.

In the case you press the other keys there are no events.

25. Revision history

Date	Manual Revision	Comment	Related SW version
27/01/2020	1.0	First release PKP1500LI J1939 manual	SWx.x